


Connect Minimate Plus, PRO or Micromate to Blastware

Best steps to complete this are below:

- Connect Minimate Plus/Blastmate-III to PC via USB Cable – Unit should beep
- Driver software may require installation. Follow Dropbox link if this isn't automatically completed or you have issues with next steps (<https://www.dropbox.com/sh/63p3x5tgrfay9tl/AABdKVzkuN7DV9fpfd8lzVx-a?dl=0>)
- In your PC device manager verify the com port that you need to choose to communicate with the unit in Blastware (See figure 1 below)

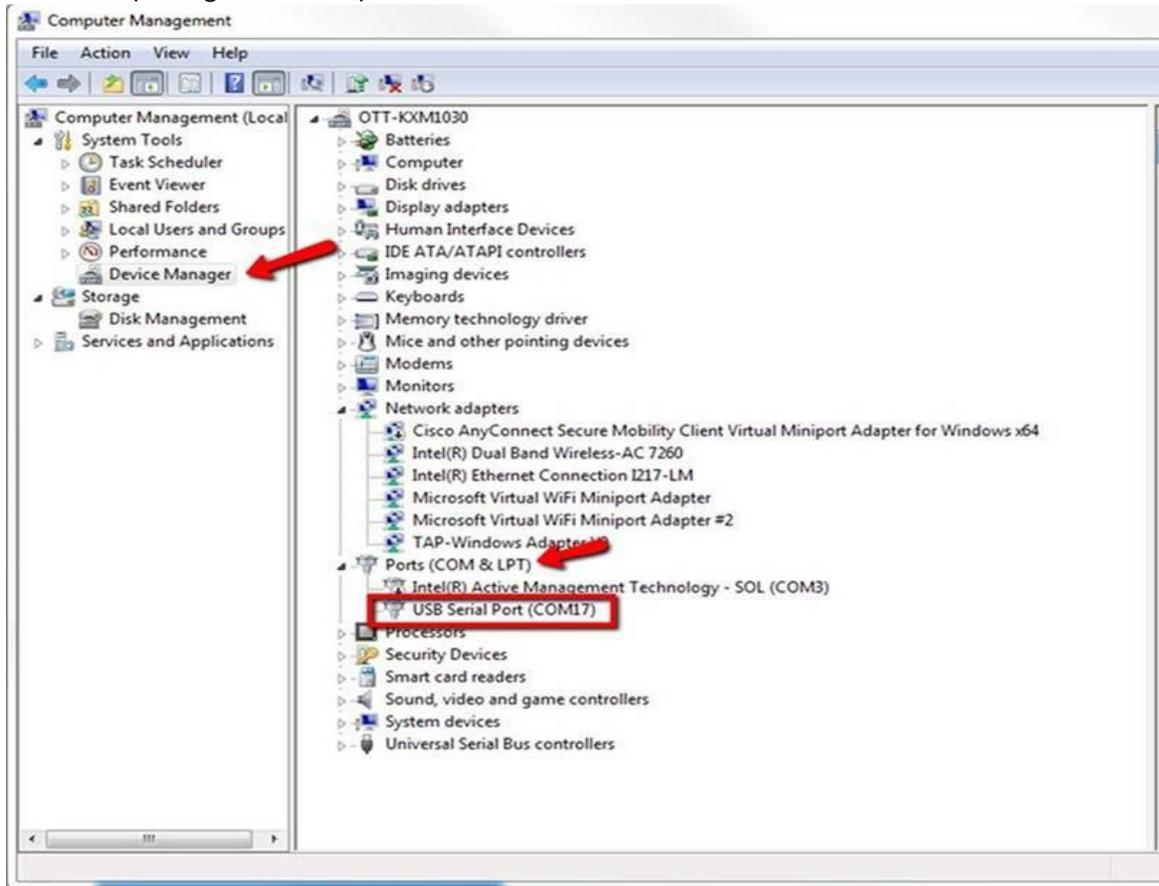


- Open Blastware and select the correct unit type at the bottom of the window (Blastmate III unit and Minimate Plus = Series III and Blastmate II = Series II)



Note: if you are using an Auxiliary to Ethernet cable follow the instructions at the bottom.


- Open Unit/Communications window and select the Com port from the device manager window to communicate as well as check the Serial communications box (See figure 2 below)

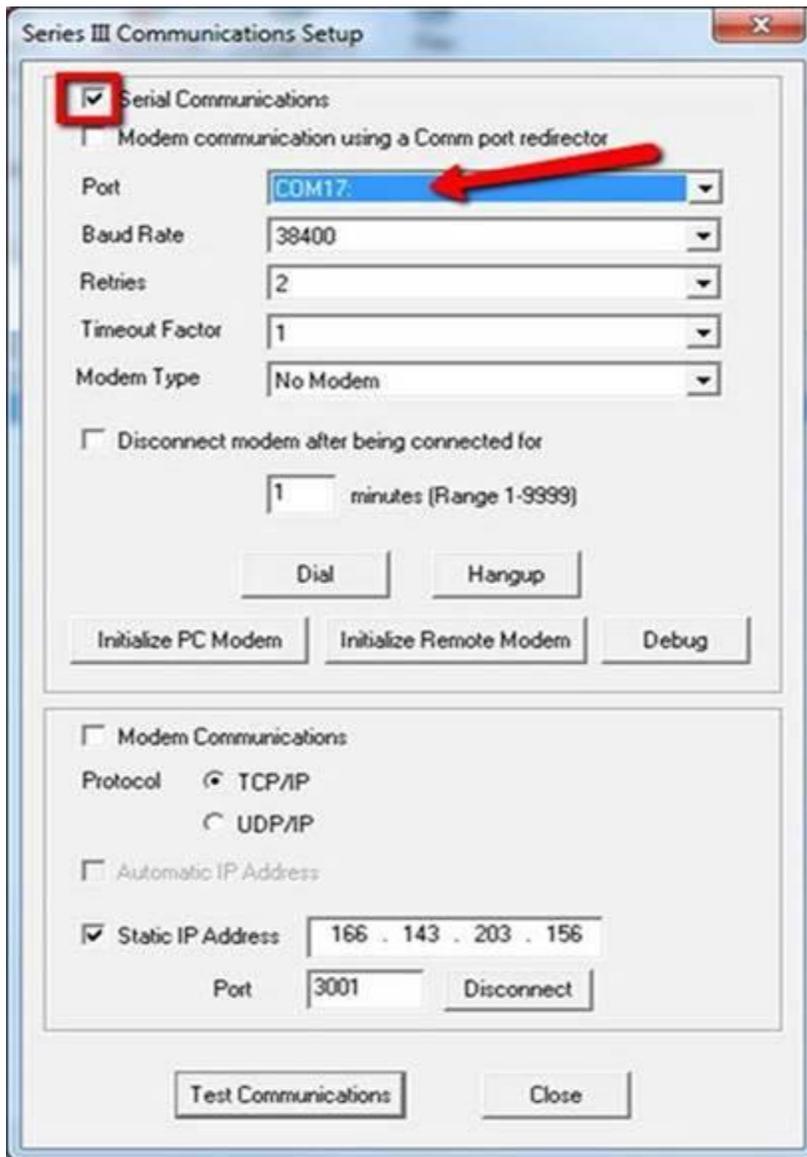

- Press Test Communications and confirm the Unit Communications OK dialogue box opens.
- To view saved events select Series III unit from the event manager (See Figure 3 below)




- To save a local copy you can then select the  and save the events.

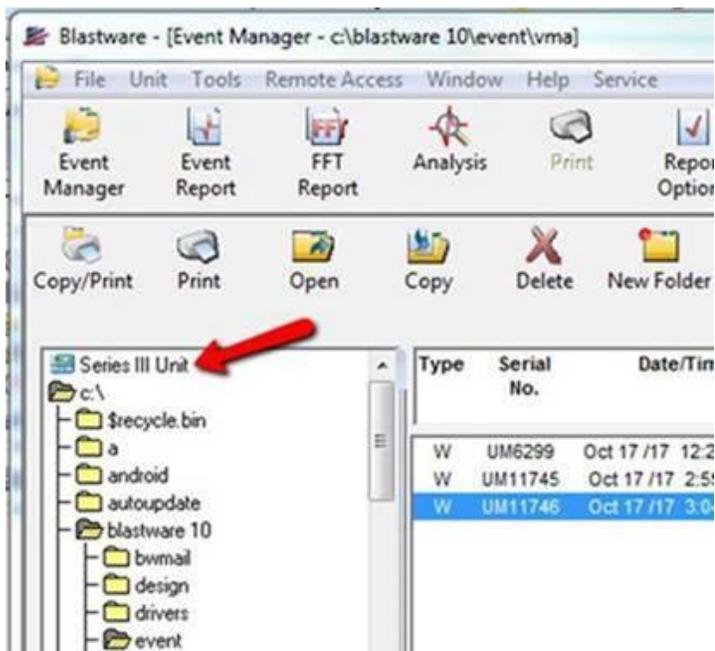

Please follow the Instructions below if you are using an Ethernet cable connected to the Auxiliary port.

1. Disconnect all other Ethernet connections other than the one from Auxiliary of the unit to your laptop.
2. Get the IP address of the device. In Minimate the IP address is in Setup=>Maintenance Menu=> View Ethernet Data => Automatic: IP (note down the IP).
3. Open Blastware and Click on Unit and then Communication.

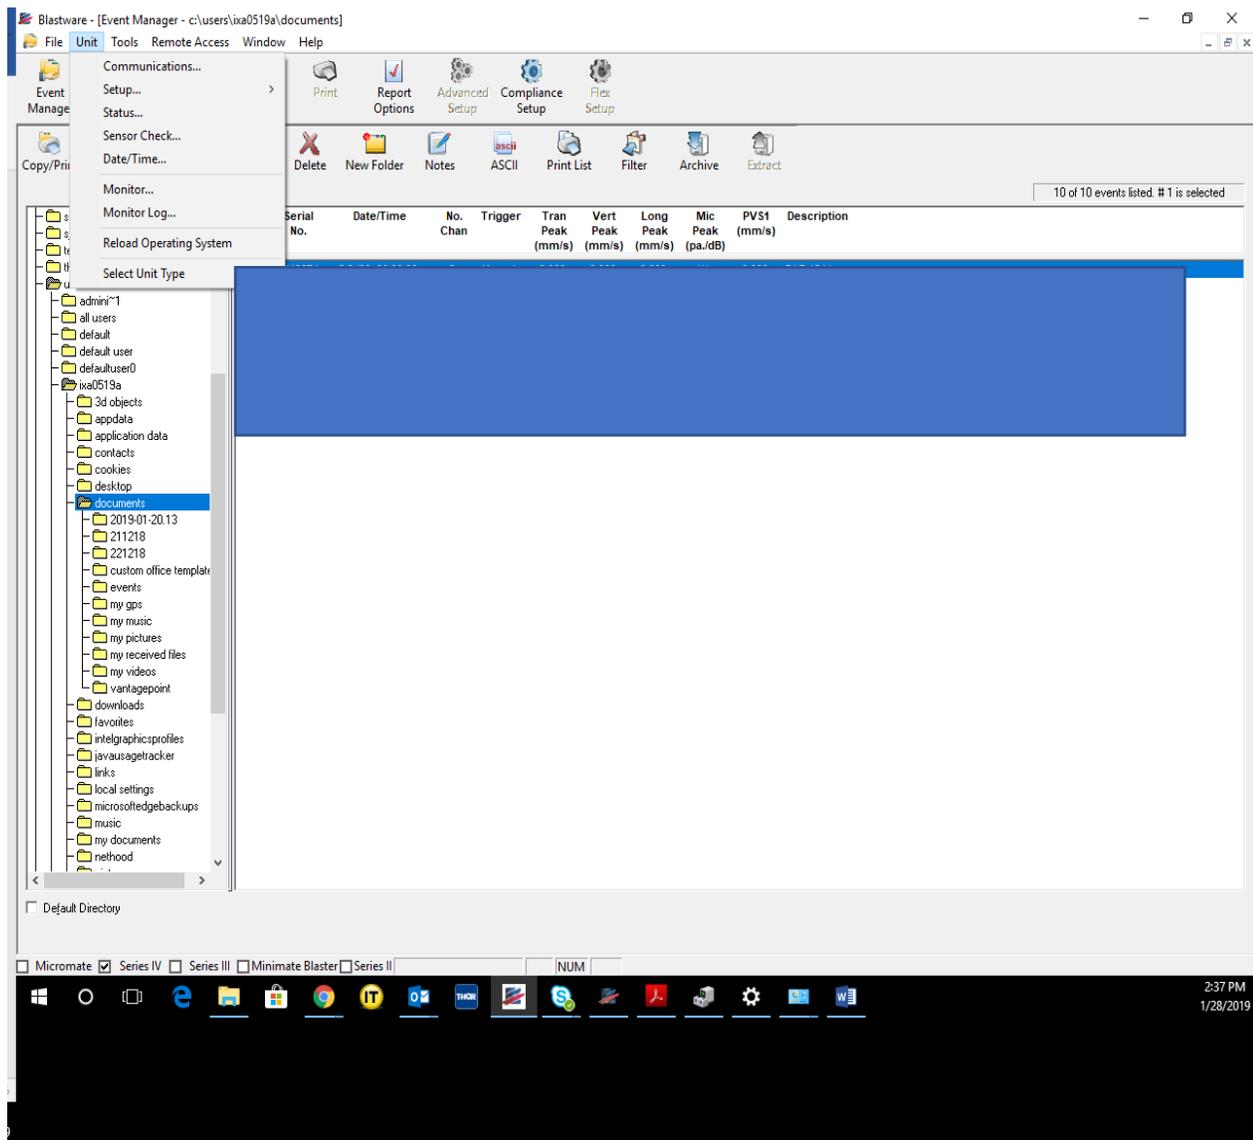

4. Check “Modem Communication using a Comm port redirector” option. And put the following information.
 Port: COM1:
 Baud Rate: 115200
 Retries: 2
 Timeout Factor: 1
 Modem Type: No Modem
5. Select “ Ethernet/Modem Communications”
 Protocol: TCP/IP.
6. Select “Static IP Address” and Input the IP you got from the minimate
 Put your port “9034”.
7. Click Test Communication and it should be tell you that Blastware can communicate with the unit.

- swksoftware
- system volume information
- temp
- thordata
- users
 - admini~1
 - all users
 - default
 - default user
 - defaultuser0
 - ixa0519a
 - 3d objects
 - appdata
 - application data
 - contacts
 - cookies
 - desktop
 - documents
 - 2019-01-20.13
 - 211218
 - 221218
 - custom office template
 - events
 - my gps
 - my music
 - my pictures
 - my received files
 - my videos
 - vantagepoint
 - downloads
 - favorites
 - intelgraphicsprofiles
 - javasagetracker
 - links
 - local settings
 - microsoftedgebackups
 - music
 - my documents
 - nethood

Type	Serial No.	Date/Time
H	UM13874	? ? /00 00:00:00
W	BE10398	Aug 12 /11 11:45:20
H	MP13248	Nov 26 /18 06:00:11
H	MP13248	Dec 10 /18 06:00:11
ARC	***	Jan 11 /19 15:20:09
LOG	BE20968	Jan 12 /19 18:03:00
LOG	BE20968	Jan 13 /19 00:00:01
LOG	BE20968	Jan 15 /19 09:38:37
LOG	BE20968	Jan 15 /19 12:00:00
LOG	UM13571	Jan 27 /19 12:03:00

Series IV Communications Setup

Serial Communications

Modem communication using a Comm port redirector

Port: COM1

Baud Rate: 115200

Retries: 2

Timeout Factor: 1

Modem Type: No Modem

Disconnect modem after being connected for 1 minutes (Range 1-9999)

Dial Hangup

Initialize PC Modem Initialize Remote Modem Debug

Ethernet / Modem Communications

Protocol: TCP/IP (Recommended) UDP/IP

Automatic IP Address

Static IP Address: 169 . 254 . 53 . 11

Port: 9034 Disconnect

Test Communications Close

10 of 10 events listed. #1 is selected

Default Directory