

# Instruction Sheet

## Firmware Upgrade

### for the Micromate Plus Monitoring Unit

Firmware upgrade must be done through Vision II software.

1. Log into your Vision II account and locate the serial number of the device requiring an upgrade.
2. In the project menu, select Device Settings (1). This opens the device information screen.
3. Select the update button in the Micromate Plus Firmware section (2).

**Note:** To perform a firmware update, the battery must be above 50% or connected to a power source and charging. The device cannot be monitoring while performing a firmware update.

